



INSTALLATION INSTRUCTIONS

Thank you for your purchase. Pro-Fit Interlock Rubber Flooring is loose lay and can be installed over top of a variety of subfloors such as concrete slab, ceramic tile, wood, laminate and flat tight-weave carpet.

Required tools


- Metal straight edge
- Sharp heavy-duty utility knife
- Measuring tape
- Chalk line
- Carpenter's square
- Knee pads

Preparation


- Inspect Pro-Fit tiles and check for shipping damages.
- Acclimatize Pro-Fit for 24 - 48 hours before installation.
- Subfloor must be smooth, straight and clean. New concrete floors must be thoroughly cured for a minimum of 120 days.

Installation


1. Find the center of the room by snapping chalk lines halfway between opposite walls. Use a carpenter's square to ensure the chalk lines intersect at 90 degrees square.

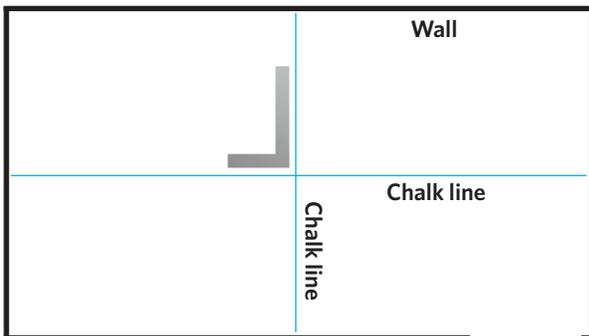

2. Find the arrowhead-shaped corner on each Pro-Fit tile. Tiles must be installed with the arrowhead corners all "pointing" in the same direction.

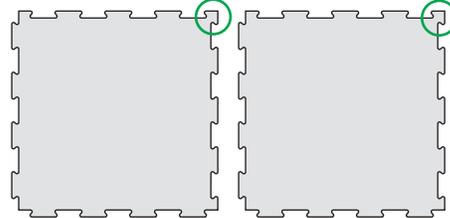

3. Install Pro-Fit tiles in a square "grid" pattern or in a staggered "brick" pattern, starting from the center of the room as marked by the chalk lines. Fit tiles together snugly and flush level with each other.

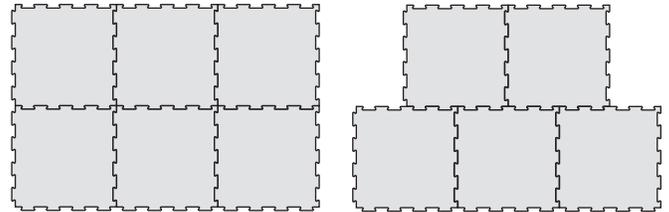

4. To fit Pro-Fit tiles at room edges and around obstacles, place a tile on a flat surface, measure the cut required, place a straight edge ruler on cut line and score several times until fully cut. Leave a 1/2" expansion joint at room edges and around protrusions.
5. After installation, sweep your new Pro-Fit floor to remove larger debris and then vacuum the floor to remove the finer particles. Thoroughly wash floor with a barely-damp mop using water and mild orange or lemon floor cleaner solution. *Do not use cleaners that contain petroleum distillates (solvents, chlorine, and acidic chemicals) or industrial oils.* Sealing is not required.

Cleaning and care

- Cleaning frequency is dependent on use and conditions.
- Sweep floor to remove larger debris and vacuum to remove finer particles.
- Wash floor with a barely-damp mop using water and mild orange or lemon floor cleaner solution. *Do not use cleaners that contain petroleum distillates, solvents, oils, chlorine, or acidic chemicals.*
- The warranty terms for this product are available at: knrubber.com/athletic/pro-fit.html